





## VACUM GASKET KITS

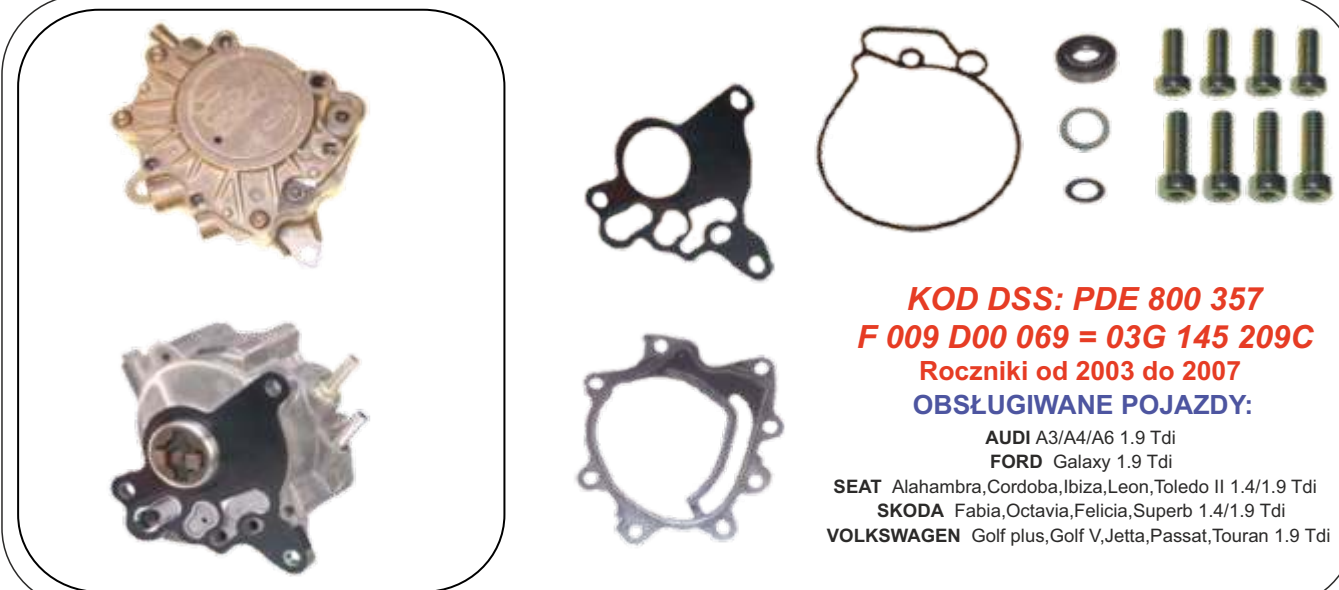


**KOD DSS: PDE 800 357**  
**F 009 D00 069 = 03G 145 209C**  
**Roczniki od 2003 do 2007**  
**OBSŁUGIWANE POJAZDY:**  
**AUDI** A3/A4/A6 1.9 Tdi  
**FORD** Galaxy 1.9 Tdi  
**SEAT** Alahambra, Cordoba, Ibiza, Leon, Toledo II 1.4/1.9 Tdi  
**SKODA** Fabia, Octavia, Felicia, Superb 1.4/1.9 Tdi  
**VOLKSWAGEN** Golf plus, Golf V, Jetta, Passat, Touran 1.9 Tdi



**KOD DSS: PDE 800 358**  
**F 009 D00 001 = 038 145 209A**  
**Roczniki od 1995 do 2006**  
**OBSŁUGIWANE POJAZDY:**  
**AUDI** A2 1.2 Tdi, A3, A4, A6 1.9 Tdi  
**SEAT** Alahambra, Altea, Arosa, Cordoba, Ibiza IV, Leon, Toledo II 1.4/1.9 Tdi  
**SKODA** Superb 1.9/2.0 Tdi  
**VOLKSWAGEN** Bora 1.9 Tdi, Caddy II/III, Eos 2.0 Tdi, Golf IV/V, Jetta, Lupo, New Beetle, Passat, Polo, Sharan, Touran 1.9/2.0 Tdi/Sdi

*Oznaczenie \* zawiera zestaw dostępny pod numerem PDE 800 506*



**KOD DSS: PDE 800 359**  
**038 145 209E = H = K**  
**Roczniki od 2000 do 2008**  
**OBSŁUGIWANE POJAZDY:**  
**AUDI** A2 1.2 Tdi, A3, A4, A6 1.9/2.0 Tdi  
**SEAT** Alahambra, Arosa, Cordoba, Ibiza, Leon, Toledo, Vario 1.4/1.9/2.0 Tdi  
**SKODA** Fabia, Octavia, Roomster, Superb 1.4/1.9/2.0 Tdi  
**VOLKSWAGEN** Beetle, Bora, Caddy, Fox, Golf IV, Lupo, Passat, Polo, Sharan, Touran 1.2/1.4/1.9/2.0 Tdi